


Parts Included

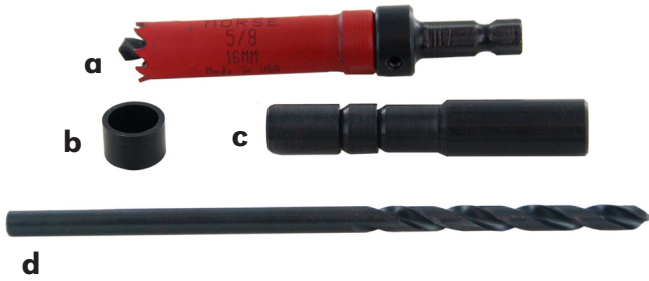

- a** - 5/8ths - 16mm Hole Saw
- b** - CD103PC Pin Cap
- c** - CD103GPN Guide Pin
- d** - 1/4" x 6" drill bit

Manufactured by



419 N. Curtis Rd., Boise Idaho 83706
(208) 429-0026 | www.coyote.us



CD103GPK

Guide Pin Kit

For use with AirLock, Medium AirLock,
Small AirLock and EasyOff Lock



Made in U.S.A.

External Prosthetic Components




EC REP



CD103GPK.revA.07012021

Advena Limited
Tower Business Centre
2nd Flr, Tower Street
Swatar, BKR 4013
Malta

Parts Included

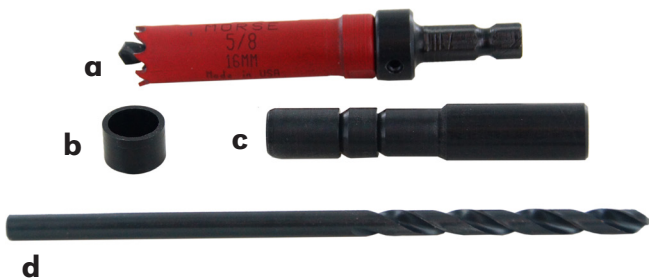

- a** - 5/8ths - 16mm Hole Saw
- b** - CD103PC Pin Cap
- c** - CD103GPN Guide Pin
- d** - 1/4" x 6" drill bit

Manufactured by



419 N. Curtis Rd., Boise Idaho 83706
(208) 429-0026 | www.coyote.us



CD103GPK

Guide Pin Kit

For use with AirLock, Medium AirLock,
Small AirLock and EasyOff Lock



Made in U.S.A.

External Prosthetic Components




EC REP



CD103GPK.revA.07012021


Advena Limited
Tower Business Centre
2nd Flr, Tower Street
Swatar, BKR 4013
Malta

Instructions for the CD103GPK Guide Pin Kit

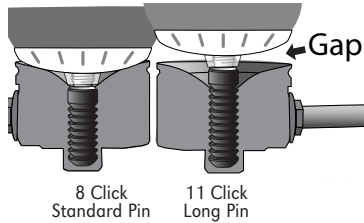

G1 Do NOT use 11 click long pin on unconverted standard AirLock, the long pin will bottom out and create a gap between lock & Liner.


With the long pin conversion kit you need enough clearance at your pyramid. If you are not hearing 5 to 6 clicks during engagement you may need to convert to a long pin.

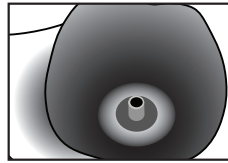


G1 Insert the CD103GPN Guide Pin into the lock to the first click.




G2 Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.

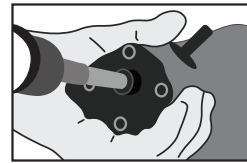

G3 Using 5/8" Hole saw and 5/8" countersink enlarge the drill hole to accept the Pin Cap.

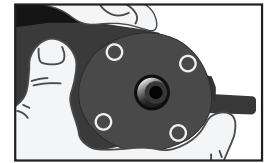


G4 Advance the Guide Pin to the second Click.

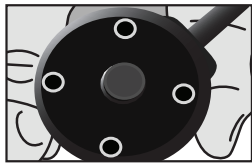

G5 Place CD103PC Pin Cap on guide pin in hole. Use the guide pin to stop pin cap at correct depth in the hole.

G6 Cap should fit over guide pin nicely with minimal resistance and should be parallel with the base of the socket. ie: NOT crooked. If pin cap goes on tight the hole may need to be enlarged just a little bit.

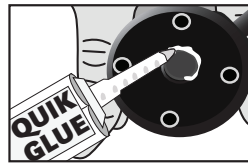

G7 Use Coyote Quik Glue or 5 minute epoxy and glue around edge of Pin Cap. Let glue set and remove guide pin.

G8 When the lock has been converted you can use the CD103P11 or CD103P11H long pin with it. With long pin check for smooth pin engagement and release. If pin is hanging up a reamer tool and sandpaper may be useful for cleaning up debris in lock.


G9 Refer to instructions included with your choice of pin for pin installation.

Need assistance?

Call us, we would love to help
(208) 429-0026


See instruction video called "Modifying Air-Lock for long pin" at www.coyotedesign.com/airlock.html

Instructions for the CD103GPK Guide Pin Kit

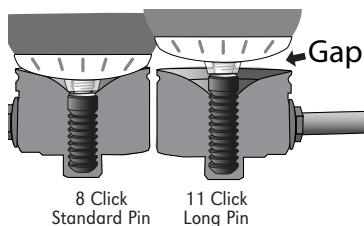

G1 Do NOT use 11 click long pin on unconverted standard AirLock, the long pin will bottom out and create a gap between lock & Liner.


With the long pin conversion kit you need enough clearance at your pyramid. If you are not hearing 5 to 6 clicks during engagement you may need to convert to a long pin.

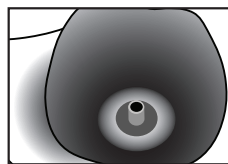


G1 Insert the CD103GPN Guide Pin into the lock to the first click.




G2 Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.

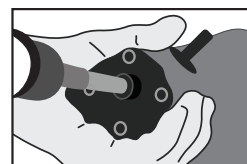

G3 Using 5/8" Hole saw and 5/8" countersink enlarge the drill hole to accept the Pin Cap.

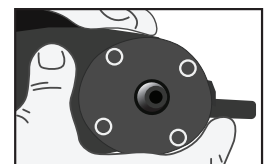


G4 Advance the Guide Pin to the second Click.

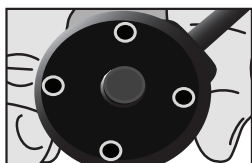

G5 Place CD103PC Pin Cap on guide pin in hole. Use the guide pin to stop pin cap at correct depth in the hole.

G6 Cap should fit over guide pin nicely with minimal resistance and should be parallel with the base of the socket. ie: NOT crooked. If pin cap goes on tight the hole may need to be enlarged just a little bit.

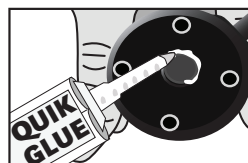

G7 Use Coyote Quik Glue or 5 minute epoxy and glue around edge of Pin Cap. Let glue set and remove guide pin.

G8 When the lock has been converted you can use the CD103P11 or CD103P11H long pin with it. With long pin check for smooth pin engagement and release. If pin is hanging up a reamer tool and sandpaper may be useful for cleaning up debris in lock.

G9 Refer to instructions included with your choice of pin for pin installation.

Need assistance?

Call us, we would love to help
(208) 429-0026

See instruction video called "Modifying Air-Lock for long pin" at www.coyotedesign.com/airlock.html