

Parts Included



CD103GPN Guide Pin



Parts Needed



- a** - 5/8ths - 16mm Hole Saw
- b** - CD103PC Pin Cap
- c** - CD103GPN Guide Pin
- d** - 1/4" x 6" drill bit
- e** - QUIK GLUE

CD103GPN Guide Pin

For use with Air-Lock and Easy-Off Locks



- | | |
|--------------------------------|----------------------------------|
| EN Instructions for Use | PT Instruções de Utilização |
| DE Gebrauchsanweisung | PL Instrukcja użytkowania |
| FR Notice d'utilisation | CS Návod k použití |
| ES Instrucciones para el uso | TR Kullanım Talimatları |
| IT Istruzioni per l'uso | RU Инструкция по использованию |
| NO Bruksanvisning | JA 取扱説明書 |
| DA Brugsanvisning | ZH 中文说明书 |
| SV Bruksanvisning | KO 사용 설명서 |
| EL Οδηγίες Χρήσης | |
| FI Käyttöohjeet | |
| NL Gebruiksaanwijzing | |



www.coyote.us/instructions



Manufactured by Coyote®
419 N. Curtis Rd., Boise, Idaho 83706 USA
(208) 429-0026 | www.coyote.us



External Prosthetic Components



Advena Limited
Tower Business Centre
2nd Flr, Tower Street
Swatar, BKR 4013
Malta



8 11576 02080 0

CD103GPK.revA.08292022

Parts Included



CD103GPN Guide Pin



Parts Needed



- a** - 5/8ths - 16mm Hole Saw
- b** - CD103PC Pin Cap
- c** - CD103GPN Guide Pin
- d** - 1/4" x 6" drill bit
- e** - QUIK GLUE

CD103GPN Guide Pin

For use with Air-Lock and Easy-Off Locks



- | | |
|--------------------------------|----------------------------------|
| EN Instructions for Use | PT Instruções de Utilização |
| DE Gebrauchsanweisung | PL Instrukcja użytkowania |
| FR Notice d'utilisation | CS Návod k použití |
| ES Instrucciones para el uso | TR Kullanım Talimatları |
| IT Istruzioni per l'uso | RU Инструкция по использованию |
| NO Bruksanvisning | JA 取扱説明書 |
| DA Brugsanvisning | ZH 中文说明书 |
| SV Bruksanvisning | KO 사용 설명서 |
| EL Οδηγίες Χρήσης | |
| FI Käyttöohjeet | |
| NL Gebruiksaanwijzing | |



www.coyote.us/instructions



Manufactured by Coyote®
419 N. Curtis Rd., Boise, Idaho 83706 USA
(208) 429-0026 | www.coyote.us



External Prosthetic Components




Advena Limited
Tower Business Centre
2nd Flr, Tower Street
Swatar, BKR 4013
Malta



8 11576 02080 0


CD103GPK.revA.08292022

Instructions for the CD103GPK Guide Pin Kit

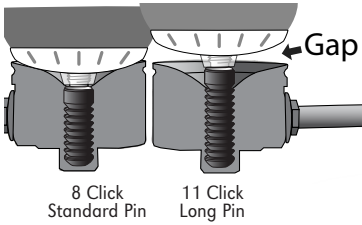

With the long pin conversion kit you need enough clearance at your pyramid.
If you are not hearing 5 to 6 clicks during engagement you may need to convert to a long pin.


1 Do NOT use 11 click long pin on unconverted standard Air-Lock, the long pin will bottom out and create a gap between lock & Liner.

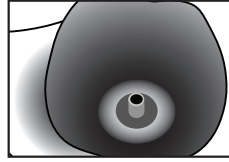


2 Insert the CD103GPN Guide Pin into the lock to the first click.




3 Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.

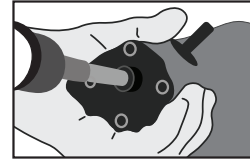

4 Using 5/8" Hole saw and 5/8" counter-sink enlarge the drill hole to accept the Pin Cap.

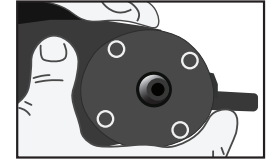


5 Advance the Guide Pin to the second Click.

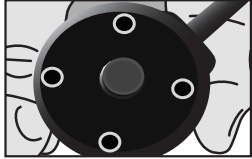

6 Place CD103PC Pin Cap on guide pin in hole. Use the guide pin to stop pin cap at correct depth in the hole.

7 Cap should fit over guide pin nicely with minimal resistance and should be parallel with the base of the socket. ie: NOT crooked. If pin cap goes on tight the hole may need to be enlarged just a little bit.

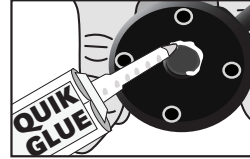

8 Use Coyote Quik Glue or 5 minute epoxy and glue around edge of Pin Cap. Let glue set and remove guide pin.

9 When the lock has been converted you can use the CD103P11 or CD103P11H long pin with it. With long pin check for smooth pin engagement and release. If pin is hanging up a reamer tool and sandpaper may be useful for cleaning up debris in lock.


10 Refer to instructions included with your choice of pin for pin installation.

Need assistance?

Call us, we would love to help
(208) 429-0026


See instruction video called "Modifying Air-Lock for long pin" at www.coyote.us/accessories

Instructions for the CD103GPK Guide Pin Kit

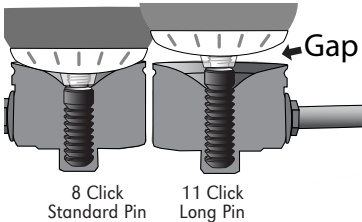

With the long pin conversion kit you need enough clearance at your pyramid.
If you are not hearing 5 to 6 clicks during engagement you may need to convert to a long pin.


1 Do NOT use 11 click long pin on unconverted standard Air-Lock, the long pin will bottom out and create a gap between lock & Liner.

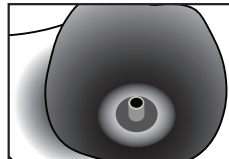


2 Insert the CD103GPN Guide Pin into the lock to the first click.




3 Using a 1/4" x 6" drill bit drill through the Guide Pin, lock and socket.

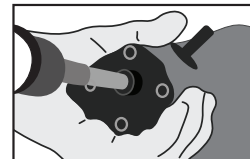

4 Using 5/8" Hole saw and 5/8" counter-sink enlarge the drill hole to accept the Pin Cap.

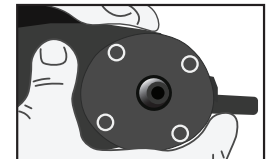


5 Advance the Guide Pin to the second Click.

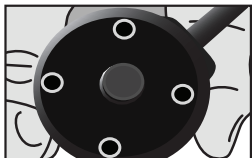

6 Place CD103PC Pin Cap on guide pin in hole. Use the guide pin to stop pin cap at correct depth in the hole.

7 Cap should fit over guide pin nicely with minimal resistance and should be parallel with the base of the socket. ie: NOT crooked. If pin cap goes on tight the hole may need to be enlarged just a little bit.

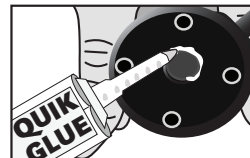

8 Use Coyote Quik Glue or 5 minute epoxy and glue around edge of Pin Cap. Let glue set and remove guide pin.

9 When the lock has been converted you can use the CD103P11 or CD103P11H long pin with it. With long pin check for smooth pin engagement and release. If pin is hanging up a reamer tool and sandpaper may be useful for cleaning up debris in lock.

10 Refer to instructions included with your choice of pin for pin installation.

Need assistance?

Call us, we would love to help
(208) 429-0026

See instruction video called "Modifying Air-Lock for long pin" at www.coyote.us/accessories