

CD122AFD

Drop-In Air-Lock Fabrication Dummy

Fabrication Instructions



Weight limit: 350 lbs.

2-year warranty against manufacturer defects, excessive wear or breakage.

Patent No. 6334876 Made in U.S.A.







Cast limb with casting handle in place to create shape of lock in mold.



2 Insert anchor in cast handle of mold. Fill mold.



Installing Dummy on Mold - If using casting handle, begin with Step 1. If NOT using casting handle, skip to Step 4.

3 Mold and anchor are



▲ Install Fabrication Plug and push plate into Air-Lock Drop-in Dummy.



Place lock dummy on mold. Trace lock. Do not use lock as fabrication



8 **7** Flatten mold to fit to lock dummy. Do not flatten beyond tracing of dummy



Drill 1/2" diameter hole Angle hole to help anchor adhesive.



Place anchor in lock dummy or use threaded stud from dummy kit.



Fill hole in cast with Coyote Quik Glue, fast-setting epoxy, or a wet



11 Place Fabrication Dummy on mold.



12 When glue sets mark desired location of release button. (See Caution #1)

ATTENTION (page 1)

- 1. Do not position lock with release button pointing posterior or anterior. Typically release button is oriented medially.
- 2. Typical Coyote® components use 6x18mm screws. In atypical setups, longer screws may be needed. Always use screws class 10.9 or better. (see more on page 2)
- 3. Do not lubricate inside of lock, this will attract debris. If you have a noise issue, it is typically due to seating. Call for technical assistance.
- 4. Always use screws provided during lamination to ensure proper depth is created for attachment.

Drape Molding Check Socket



Apply nylon over mold. Reflect and twist nylon around lock dummy.

Typical Coyote® components

use 6x18mm screws provided and Loctite® Blue 242 when attaching pyramid. Torque provided connector screws to 10 Nm. (See Caution #2 and #4)

Laminating

Pull vacuum nylon over sock-

Add one layer of Electrical

tape at edge of lock dummy

and cut off excess nylon at

et and lock dummy.

distal end of dummy.



14 Use a hot awl or scissors to expose connector posts.

23 Carefully smooth inside

assembly of lock.

31 Pull PVA Bag over sock-

Heat shrink it for tight fit.

Do not use lock as fabrica-

tion dummy

et and lock dummy

of hole to allow for easy



15 Place adhesive foam on connector posts.

springs first. It slides easily

ONLY one way. Verify orientation first. (See Caution #3)



17 For extra strength, fold excess seam on distal end of connector.

release button into

valve body.

5 Casting Handle users

skip to step 10.



19 Remove socket in traditional fashion or with socket extractor.



20 Use the Threaded Bolt and 3/4" socket wrench to push the dummy out.



21 Press lock into place and attach pyramid with supplied 6mm x 18mm screws

Parts Included

 ϵ



Dummy for Drop-In Air-Lock

Push Plate

Drop-In Dummy















TR | Kullanım Talimatları RU | Инструкция по использованию

JA | 取扱説明書

ZH | 中文说明书

KO | 사용 설명서

DA | Brugsanvisning SV | Bruksanvisning

EN | Instructions for Use

FR | Notice d'utilisation

IT | Istruzioni per l'uso

NO| Bruksanvisning

DE | Gebrauchsanweisung

ES | Instrucciones para el uso

FI | Käyttöohjeet

NL | Gebruiksaanwiizina

PT | Instruções de Utilização PL | Instrukcja użytkowania

EL | Οδηγίες Χρήσης



www.coyote.us/instructions-dropin

99 99

<u>petween posts.</u> Avoid extra material around fabrication

olug for easier removal.





32 Tie off PVA bag and

one layer of electrical tape

over distal end of lock.

apply vacuum. Apply


40 Tie second layer of composite under five hole plate and reflect down over mold



24 Slide lock plate into lock, 25 Place lock pin in lock to 26 Add third spring. Slide

hold lock plate.

33 Cut away PVA Bag electrical tape and lock edge. Fill circular crack of push plate with clay or putty. Cover bottom of dummy with compound 4.

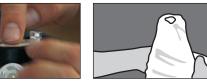

from distal end against




34 Pull nylon stockinette or other materials over connector, lock dummy and mold.



27 Thread valve body into

housing.

35 Twist and reflect material to leave a small open circle in center of connector

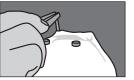

28 Hand-tighten valve

well socket.

body with Coyote lock

wrench or 13mm deep

36 Ensure holes of connector are exposed. A hot nail or awl can be used.



29 Use Coyote alignment

coupler CD106 for

alianment during fitting.

37 Pull first composite layer over mold. Cut top edges to fold around posts.



39 Lubricate screws and install five hole plate. (See Caution #4)



41 Pull bag and laminate as usual. Initially restrict flow to force lamination through the center hole on plate, forcing out air pockets.



42 Toward end of lamination, tape can be placed over five hole plate to squeeze excess resin out of lamination.



43 String can also be tied between fabrication plug and top of lock to ensure seal (see Caution #6)

Need assistance?

Call us, we would love to help. (208) 429-0026





Finish




44 Expose edge and remove excess lamination.



45 Remove five hole plate.



46 Expose fabrication plug and remove

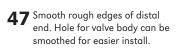

48 Remove socket in traditional fashion or with socket extractor.



49 Use the Threaded Bolt

and 3/4" socket wrench


to push the dummy out.

51 Wipe down O-ring on socket with alcohol before inserting.

from lock



52 Press lock into place and attach pyramid with supplied 6mm x 18 mm

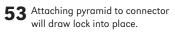

54 See steps 23-27 for lock assembly instructions. Use 6x18mm screws provided (see Caution #2 and #4) and Loctite® Blue 242 when attaching pyramid. Torque provided connector screws to 10 Nm.



When attaching the dummy to the cast. The Air-Lock Anchor or Threaded Stud can be used with the Drop-In Air-Lock Dummy



The Threaded holt is used in conjunction with the push plate to push the dummy out of the socket.

Two Part Pin & Solid Pin install and proper seating Instructions See instruction video called at www.coyote.us/easyoff


Poor seating leads to premature lock wear. The pin spacers are used to adjust the pin to seat with any liner. There should be no play between the lock and the liner when fully engaged. It is best to check seating using the Fitting Lock (CD103FL) which is reinforced to make pin evaluation fast and easy.



Roll liner of choice onto patient. Add desired number of sock ply if used.




Install pin on liner. Engage lock to check for play between lock and liner

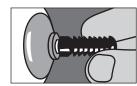


If there is play, loosen iii pin away from adaptor screw and liner.




Reengage lock to check for play. Repeat until lock seats completely.

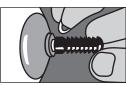

and liner. Based on gap created by loosening pin, add spacers. (See Caution #5)

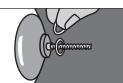

V Gap is created between lock Vi Based on the gap created by Vi Replace pin on loosening pin, install appropriate number of pin spacers on adapter (see Caution #2).

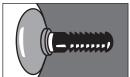

adaptor, making sure base fits snugly on pin spacers.



vii After installing pin spacers, re-engage lock to be sure there is no play




Apply Loctite® Blue 242 to threads of lock pin and adaptor screw. Pin needs to be tightened with a 7/16" or 11 mm wrench. (See Caution #4, #5, #12)



www.coyotede.us/video




H1 Install pin on liner. Engage lock to check for play between lock and

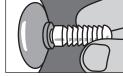


H2 If there is play, loosen pin away from adaptor screw and liner.




H3 Reengage lock to check for play. Repeat until lock seats completely. Remove lock.

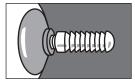

H4 If a Gap is created between the pin and

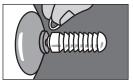

gap created by loosening pin, install appropriate number snugly on pin spacers. of pin spacers on threaded end (see Caution #5).

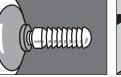

H5 Based on the size of the H6 Replace pin on adaptor, H7 After installing pin making sure base fits



spacers, re-engage lock to be sure there is no play.



to threads of lock pin. Pin may need to be tightened with a 7/16" or 11 mm wrench. (See Caution #5)



ATTENTION (page 2)

oriented medially.

Detach here and keep everything below with patient records ~

For tracking purpose, write LOT number (from funnel of lock) here: _

CD122A Air-Lock Drop-In Lock - Sold Seperately



Housing with attached connector



Springs (3)



Valve body

99

99

Small Foam

Circles (4)

Lock plate

Fabrication plug





Five Hole Plate



Do not use lock as fabrication dummy Repeated insertion will degrade the blue sealing ring.

Documenting Suction

We view suction not as a component or a code, but as a function. Pistoning and milking can be reduced by maintaining a suction socket when using this

- The suction feature of the lock can be demonstrated and documented
- Have the amputee step into the lock and seat completely.
- Using the lock wrench, remove the valve body, release button, and outer spring from the lock. The amputee is still locked into the socket, but air is now allowed to flow into the bottom of the socket like a traditional pin.
- Walk the patient normally.
- Amputee may experience a difference in how the socket feels immediately, after some ambulation, or after reinstalling the valve body, release button and outer spring. Patient feedback should be documented.

Call for more information on coding of the Air-Lock: (208) 429-0026.

* It is the practitioner's responsibility to demonstrate, document, and select appropriate codes for insurance billing.


- ensure proper depth is created for attachment.
- 5. Never exceed 3 pin spacers.
- with the lock and connector. Actual lay-ups are

responsibility of the technician and/or practitioner.

7. Note number of clicks for engagement. There 1. Do not position lock with release button pointing should be at least 2 to 3 clicks engagement prior posterior or anterior. Typically release button is to any ambulation and more clicks should occur after a few steps. 5 to 6 clicks (depending on 2. Typical Coyote® components use the 6x18mm liner) are required for full/proper seating and

in cases of tight threads.

screws. In atypical setups, longer screws may be needed. Always use screws class 10.9 or better. Make sure screw length fully seats into connector (2)base not just post, longer screws may be needed depending on pyramid thickness.

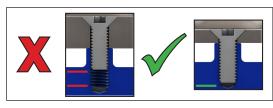


- 3. Do not lubricate inside of lock, this will attract debris. If you have a noise issue, it is typically due to seating. Call for technical assistance.
- 4. Always use screws provided during lamination to
- 6. Lay-up instructions are helpful hints on how to work

- engagement. 8. Liner threads vary. Begin threading pin into liner by hand whenever possible. A wrench will be needed
- Regardless of threading, always use Loctite® Blue 242 on lock pin threads. If installing into a plastic distal adapter Loctite® Blue 242 should also be
- 10. Do not use the CD103P11 long pin with the Drop-In Easy-Off Lock or the Drop-In Air-Lock. With most liners this longer pin will bottom out in the lock.
- If using a flexible inner liner, do not leave plastic over lock housing, this can cause air leakage and other issues. You should laminate directly over housing. Contact Coyote for more information, or visit the video gallery at www.coyote.us.
- 12. If you have a pin you cannot install, even with a wrench, contact Coyote for a replacement.




Air-Lock with P8 Pin

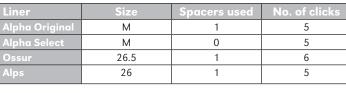

Screws (4)

(Chart is a auideline. NOT a guarantee of seating. Verify seating.)

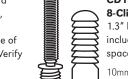



Additional Pins




CD103P8H





CD103PQ

8-Click Pin

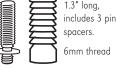

CD103PX

8-Click Pin